

Fomicom n.v.

Industrielaan 9 9990 Maldegem - BELGIUM

www.fomicom.com info@fomicom.com

TEL: +32 (0)50 40 51 70 FAX: +32 (0)50 40 51 77


INSTRUCTIONS clean kit adapter

1. Empty hoses


After use, close cylinder valves and keep gun opened for at least 45 seconds to make sure the hoses are completely empty and pressure free.



Disconnect the hoses from the cylinders.

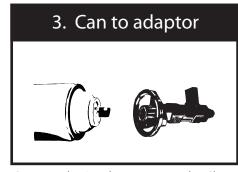


Connect the PU cleaner can to the Clean Kit Adaptor (CKA). Make sure CKA valve is closed (vertical, as on drawing above).

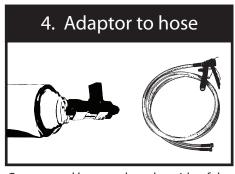


Connect red hose to the other side of the CKA.

5. Clean red hose

Turn CKA valve open. Pull trigger and hose will automatically be flushed. Do this until you see all (yellow) substance is out of the hose.

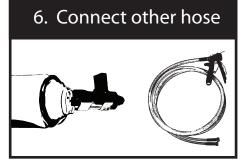

Close CKA valve and disconnect red hose from adapter. Now reconnect the CKA to the blue hose.

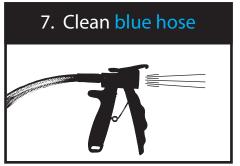

Flush blue hose by turning ball valve from the CKA open and pulling the trigger.



If hoses are not being used for some time, shut off by using the 2 screws. That way, air and oxygen cannot enter the hoses.